

Concord - Time and Date Setting

Setting the Time and Date

To set the System Time:

1. Enter the programming menus by pressing 9 + System or Partition Master CODE.
2. Press 020.
3. Enter the correct time in 24-hour format (4 digits--see Figure 4), then press #. For example, if the current time is 7:23 a.m., press 0723 + #.
4. Press * + 00 + # to exit the programming menus.

00:00	Midnight	08:00	8:00am	16:00	4:00pm
01:00	1:00am	09:00	9:00am	17:00	5:00pm
02:00	2:00am	10:00	10:00am	18:00	6:00pm
03:00	3:00am	11:00	11:00am	19:00	7:00pm
04:00	4:00am	12:00	Noon	20:00	8:00pm
05:00	5:00am	13:00	1:00pm	21:00	9:00pm
06:00	6:00am	14:00	2:00pm	22:00	10:00pm
07:00	7:00am	15:00	3:00pm	23:59	11:59pm

Figure 4. 24 Hour Format

To set the System Date:

1. Enter the programming menus by pressing 9 + System or Partition Master CODE.
2. Press 021.
3. Enter the current date as 6 digits (mm/dd/yy) then press #. For example, if the current date is January 15, 2000, press 011500 + #.
4. Press * + 00 + # to exit the programming menus.